



NO COMMAND - VALVE CLOSED  
ELECTRIC COMMAND - VALVE GOES  
INTO PRESSURE SUSTAINING MODE