



NO COMMAND - VALVE CLOSED  
 ELECTRIC COMMAND - VALVE GOES  
 INTO PRESSURE SUSTAINING MODE