

MAINTENANCE

Replacing the batteries in the BackFlush controller

For controllers powered by 4 x 1.5v D-size batteries (6v DC)



ATTENTION

- Match the poles to the markings inside the battery housing.
- Always replace the whole set of 4 batteries at once.

1. Remove the upper cover.
2. Pull out the battery housing.
3. Remove the used batteries from the battery housing.
4. Insert new batteries.
5. Push the battery housing back in.
6. Put the upper cover back in place.

